




Installation and operation manual

Fan coil units

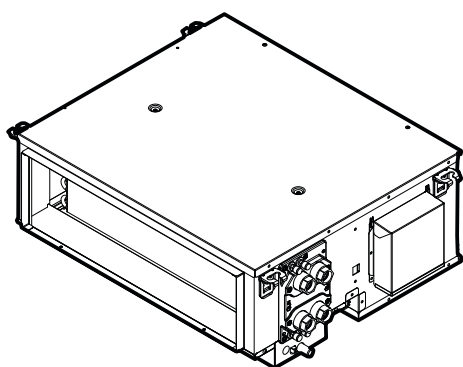

FWE-04FB
FWE-05FB
FWE-06FB
FWE-08FB
FWE-10FB
FWE-12FB
FWE-14FB
FWE-16FB
FWE-20FB
FWE-24FB

Installation and operation manual
Fan coil units

English

[illegible]

Daikin Europe N.V.

- | | | | |
|----|----|---|----|
| 01 | 01 | decares under its sole responsibility that the products to which this declaration relates: | 09 |
| 02 | 02 | erklärt in alleiniger Verantwortung, dass die Produkte, auf die sich diese Erklärung bezieht: | 10 |
| 03 | 03 | declare sous sa seule responsabilité que les produits visés par la présente déclaration: | 11 |
| 04 | 04 | verklaart hierbij op eigen verantwoordelijkheid dat de producten waarop deze verklaring betrekking heeft: | 12 |
| 05 | 05 | declara bajo su única responsabilidad que los productos a los que hace referencia esta declaración: | 13 |
| 06 | 06 | dichara sotto la propria responsabilità che i prodotti a cui è riferita questa dichiarazione: | 14 |
| 07 | 07 | бъявляет свою полную ответственность за продукты, к которым относится эта декларация: | 15 |
| 08 | 08 | declara sotto sua esclusiva responsabilità che, os prodotti a qua esta declaração se refere: | 16 |

($\ast=04, 05, 06, 08, 10, 12, 14, 16, 20, 24$),

- 01 are in conformity with the following (directives or) regulation(s) provided that the products are used in accordance with our instructions:
02
03 folgende in Reichtlinie oder (Verordnungen) entsprechen, vorausgesetzt, dass diese gemäß unseren Anweisungen verwendet werden.
04
05 conformes à (aux) directive(s) ou règlement(s) suivants, à condition que les produits soient utilisés conformément à nos instructions:
06
07 overeenstemming met de volgende richtlijn(en) of verordening(en), op voorwaarde dat de producten worden gebruikt overeenkomstig onze
08 instructies:
09
10 están en conformidad con la(s) siguiente(s) directiva(s) o reglamento(s), siempre que se utilicen de acuerdo con nuestras instrucciones:
11
12 estão em conformidade com a(s) seguinte(s) directiva(s) ou regulamento(s), desde que os produtos sejam utilizados de acordo com as nossas
13 instruções.

Low Voltage 2014/35/EU
Electromagnetic Compatibility 2014/30/EU*
Machinery 2006/42/EC**

- | | | | |
|----|-----------------------------------|----|----------------------------|
| 01 | following the provisions of: | 01 | underlagt bestemmelsen af: |
| 02 | gemäß den Bestimmungen in: | 10 | under bestemmelserne for: |
| 03 | conformément aux dispositions de: | 11 | ihindhold 1 bestemmelse: |
| 04 | conformément aux dispositions de: | 12 | ihindhold 1 bestemmelse: |
| 05 | selv efter de dispositioner de: | 13 | noudatidaen sammekøst: |
| 06 | volgens de bepalingen van: | 14 | toe toedien gebruik over: |
| 07 | selv efter de dispositioner de: | 15 | toe toedien gebruik over: |
| 08 | conformément aux dispositions de: | 16 | forord 1221: |
| 09 | conformément aux dispositions de: | 17 | zborné zoznačenieiam: |
| 10 | conformément aux dispositions de: | 18 | urnándi prevetóre: |

- 01 Note* as set out in <4> and judged positively by <8> according to the **Certificat** <7>
- 02 Hinweis* we in <4> aufgeführt und von <8> positiv beurteilt, gemäß **Zertifikat** <7>
- 03 Remarque* toutes que définies dans <4> et évaluées positivement par <8> conformément au **Certificat** <7>
- 04 Bemerk* zoals uiteengezet in <4> en positief beoordeeld door <8> overeenkomstig het **Certificaat** <7>
- 05 Nota* tal como se establece en <4> y valorado positivamente por <8> de acuerdo con el **Certificado** <7>

- 01** Dalkin Europe N.V. is authorised to compile the Technical Construction File.
 02** Dalkin Europe N.V. hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.
 03** Dalkin Europe N.V. est autorisée à compiler le Dossier de Construction Technique.
 04** Dalkin Europe N.V. is beregt om het Technisch Constructiedossier samen te stellen.
 05** Dalkin Europe N.V. está autorizado a compilar el Archivo de Construcción Técnica.
 06** Dalkin Europe N.V. è autorizzata a redigere il File tecnico di Costruzione.

- 07^{ης} Η Δακίνη Europe N.V. είναι εξουσιοδοτημένη να αναλάβει τον Τεχνικό φάκελο κατασκευής.
08^{ης} Η Δακίνη Europe N.V. está autorizada a compilar a documentação técnica de fabrico.
09^{ης} Компания Дакін Еуропе N.V. уполномочена составлять Комплект технической документации.
10^{ης} Дакін Еуропе N.V. er autoriseret til at udarbejde de tekniske konstruktionsdata.
11^{ης} Дакін Еуропе N.V. er bemyndigede att sammanställa den tekniska konstruktionsfilen.
12^{ης} Дакін Еуропе N.V. har tillatelse til at samle den tekniske konstruktionsfilen.

- 13³³ Daikin Europe N.V. on valutuultu laadima. Teknisen asiantilan.
- 14³⁴ Společnost Daikin Europe N.V. má oprávnění ke kompilaci, souboru
- 15³⁵ Daikin Europe N.V. je ověřen za izradu Dadeketa o termičkoj kolo
- 16³⁶ A Daikin Europe N.V. jogsullta a mizaki konstrukcijskoj dokument
- 17³⁷ Daikin Europe N.V. má upovaženie do zbierania i opracowywani
- 18³⁸ Daikin Europe N.V. este autorizat să compileze Docarul tehnic de

- technické konstrukce.
ukojí.
összeállítására.
dokumentációj konstruk-
strukciój.

- 19th Dáikin Europe N.V. je podoželan za sestavo datoteke s tehnično mapo.
- 20th Dáikin Europe N.V. on volatid koostana temisti dokumentatsioni.
- 21st Dáikin Europe N.V. je otprizgana da cistava. Arta za tehnička konstruksija.
- 22nd Dáikin Europe N.V. yra garbiada sudaryti s techninis konstrukcijos faila.
- 23rd Dáikin Europe N.V. ir autorizatsi sasidati temisti dokumentai.
- 24th Spolnostnost Dáikin Europe N.V. je opravmeta vyhovoti slobr technické konstrukce.
- 25th Dáikin Europe N.V. Teknik Yapi Dosyaslari derlemeye yetkilidir.

- [illegible]

- 01 as amended,
02 in der jeweils gültigen Fassung,
03 telles que modifiées,
04 zoals gewijzigd,
05 en su forma enmendada,
06 e successive modificate,
07 отнукъ външъ прѣмѣнѣи,

- 08 conforme emendado,
09 в действующей редакции,
10 som tilføjet,
11 med tilføjet,
12 med foretagne endringer,
13 sellaisia kuin ne ovat muuttetuina,

- 14 v platném znění,
15 jako je změněno amandmanima,
16 és mndostlák rendelkéseli,
17 z pónkzslzml zmlánaml,
18 cu amandmantel respctive,
19 kakol je blllo spremenjeno,

- 20 koos muudatuslega,
21 с техните изменения
22 ир jps tolesnes redakci
23 ar grozijumiem,
24 v poslednom platnom
25 deģistirdīgi šekiniļe,

- | | | | |
|----------------|--|------------|---|
| 16 Magjestrasi | son angli <4> rohi goktanas ar <4> enlig | 17 Uwaga* | son del ferikimori <4> ro wurdet positiw ar |
| | Coniflat <4> | | hendihi hi Seriflati <4> |
| | | 18 Nod* | seksina kumne on selthet asoripessa <4> ja |
| | | | puta <4> on iwasynsi. Seriflatin <4> |
| | | 19 Opomba* | jak iyo udereno <4> a pozitiwne zjsteno <4> |
| | | 20 Markus* | u siluadu <4> Oweridim <4> |
| | | | kako je izbrano <4> pozitivno odjeljeno od |
| | | | ozna. prema Coniflatu <4> |

- | | | | |
|--|------------|--|------------|
| 21 | 3a6b6m6x1a | 21 | 3a6b6m6x1a |
| a1z) alapán, a(z) igazolta a megfellest, | | a1z) alapán, a(z) igazolta a megfellest, | |
| a2z) tanúskorv szent, | | a2z) tanúskorv szent, | |
| z) zornike z dokumentacj pozitywna | 22 | z) zornike z dokumentacj pozitywna | 22 |
| z) Swiadczeni | | z) Swiadczeni | |
| asa cum se prevede in si arecat pozitiv de | 23 | asa cum se prevede in si arecat pozitiv de | 23 |
| conform Certificatului | | conform Certificatului | |
| Kol je doobleno v je prelo pozitivno oeno | 24 | Kol je doobleno v je prelo pozitivno oeno | 24 |
| v skladu z Certificatim | | v skladu z Certificatim | |
| Ms on sãhestãud dokumentis ja hrãtud | 25 | Ms on sãhestãud dokumentis ja hrãtud | 25 |
| vasistudovãud dokumentis vasãval | | vasistudovãud dokumentis vasãval | |
| Sertifikacãde | | Sertifikacãde | |

- [illegible]

- | | |
|-----|--------------|
| <A> | TCF DT22-402 |
| | - |
| <C> | - |

- | | |
|-------|---|
| 0101* | Dalain Europe N.V. is authorised to compile the Technical Construction File |
| 0202* | Dalain Europe N.V. hat die Berechtigung die Technische Konstruktsaktsakte |
| 0303* | Dalain Europe N.V. est autorisé à compiler le Dossier de Construction Techn |
| 0404* | Dalain Europe N.V. is bevoegd om het Technisch Constructiedossier samen |
| 0505* | Dalain Europe N.V. está autorizada a compilar el Archivo de Construcción |
| 0606* | Dalain Europe N.V. è autorizzata a redigere il File Tecnico di Costruzione. |

- 19th Dáikin Europe N.V. je podoželan za sestavo datoteke s tehnično mapo.
- 20th Dáikin Europe N.V. on volatid koostana temisti dokumentatsioni.
- 21st Dáikin Europe N.V. je otprizgana da cistava. Arta za tehnička konstruksija.
- 22nd Dáikin Europe N.V. yra garbiada sudaryti s techninis konstrukcijos faila.
- 23rd Dáikin Europe N.V. ir autorizatsi sasidati temisti dokumentai.
- 24th Spolnostnost Dáikin Europe N.V. je opravmeta vyhovoti slobr technické konstrukce.
- 25th Dáikin Europe N.V. Teknik Yapi Dosyaslari derlemeye yetkilidir.

Table of contents

1 About the documentation	3
1.1 About this document.....	3
1.2 Meaning of warnings and symbols	3
1.3 General.....	4
2 Specific installer safety instructions	4
For the installer	5
3 About the box	5
3.1 To unpack and handle the fan coil unit.....	5
3.2 To remove the accessories from the fan coil unit.....	5
4 About the units and options	6
4.1 Identification	6
4.1.1 Identification label: Fan coil unit.....	6
5 Unit installation	6
5.1 Preparing the installation site	6
5.2 Interchangeability	7
5.3 Mounting the unit.....	7
5.3.1 To install the suspension bolts.....	7
5.3.2 To mount the unit.....	8
5.4 Water piping installation	8
5.4.1 Preparing water piping	8
5.4.2 Connecting water piping	9
5.5 Drain piping installation	10
5.5.1 Guidelines when installing the drain piping.....	10
5.5.2 Connecting the drain piping	10
5.6 Optional equipment installation	11
5.6.1 Preparing of optional equipment	11
5.6.2 Connecting the optional equipment	12
6 Electrical installation	12
6.1 Preparing electrical wiring	12
6.2 Connecting the electrical wiring.....	13
7 Commissioning	13
7.1 Checklist before commissioning	13
For the user	14
8 User safety instructions	14
8.1 Instructions for safe operation	14
9 About the system	14
10 Before operation	15
11 Operation	15
11.1 Operation range.....	15
12 Energy saving and optimum operation	15
13 Maintenance and service	15
13.1 Maintenance safety precautions.....	15
13.2 Precautions for maintenance and service	16
13.3 Cleaning the air filter, suction grille, air outlet and outside panels.....	16
13.3.1 To clean the air filter	16
13.4 Maintenance after a long stop period	17
13.5 Maintenance before a long stop period	17
13.6 After-sales service and warranty	17
13.6.1 Recommended maintenance and inspection.....	17
13.6.2 Shortened maintenance and replacement cycles.....	17
14 Troubleshooting	17

14.1 To solve the problems with your fan coil unit.....	18
14.2 Relocation.....	18

15 Disposal 18

16 Technical data 19

16.1 Wiring diagram	20
16.2 Dimensions.....	21

17 Information requirements for ecodesign 22

1 About the documentation

1.1 About this document



WARNING

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children SHALL NOT play with the appliance.

Cleaning and user maintenance SHALL NOT be made by children without supervision.

Target audience

Authorised installers + end users



INFORMATION

This appliance is intended to be used in commercial, industrial or business environment.

Documentation set

This document is part of a documentation set. The complete set consists of:

▪ General safety precautions:

- Safety instructions that you must read before installing
- Format: Paper (in the box of the indoor unit)

▪ Indoor unit installation and operation manual:

- Installation and operation instructions
- Format: Paper (in the box of the indoor unit)
- Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

The latest revision of the supplied documentation is published on the regional Daikin website and is available via your dealer.

The original instructions are written in English. All other languages are translations of the original instructions.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

1.2 Meaning of warnings and symbols



DANGER

Indicates a situation that results in death or serious injury.



DANGER: RISK OF ELECTROCUTION

Indicates a situation that could result in electrocution.

2 Specific installer safety instructions



DANGER: RISK OF BURNING/SCALDING

Indicates a situation that could result in burning/scalding because of extreme hot or cold temperatures.



WARNING

Indicates a situation that could result in death or serious injury.



CAUTION

Indicates a situation that could result in minor or moderate injury.



NOTICE

Indicates a situation that could result in equipment or property damage.



INFORMATION

Indicates useful tips or additional information.

Symbols used on the unit:

Symbol	Explanation
	Before installation, read the installation and operation manual, and the wiring instruction sheet.

1.3 General

If you are NOT sure how to install or operate the unit, contact your dealer.



WARNING

Improper installation or attachment of equipment or accessories could result in electrical shock, short-circuit, leaks, fire or other damage to the equipment. **ONLY** use accessories, optional equipment and spare parts made or approved by Daikin unless otherwise specified.



WARNING

Make sure installation, testing and applied materials comply with applicable legislation (on top of the instructions described in the Daikin documentation).



CAUTION

Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.



WARNING

Tear apart and throw away plastic packaging bags so that nobody, especially children, can play with them. **Possible consequence:** suffocation.



WARNING

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.



CAUTION

Do NOT touch the air inlet or aluminium fins of the unit.



CAUTION

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.



DANGER: RISK OF ELECTROCUTION

- Make sure that the system is earthed properly.
- Turn OFF the power supply before servicing.
- Install the switch box cover before turning ON the power supply.



CAUTION

- Check if the installation location can support the unit's weight. Poor installation is hazardous. It can also cause vibrations or unusual operating noise.
- Provide sufficient service space.
- Do NOT install the unit so that it is in contact with a ceiling or a wall, as this may cause vibrations.



DANGER: RISK OF ELECTROCUTION

Do NOT operate the fan coil units with wet hands. An electrical shock may result.



WARNING

This unit contains electrical and hot parts.



WARNING

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

2 Specific installer safety instructions

Always observe the following safety instructions and regulations.



WARNING

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation (for example national gas regulation) and are executed **ONLY** by authorised persons.



WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.



WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.



CAUTION

For walls containing a metal frame or a metal board, use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.



NOTICE

- The pipework shall be securely mounted and guarded protected from physical damage.
- Keep the pipework installation to a minimum.



WARNING

- Do NOT use locally purchased electrical parts inside the product.
- Do NOT branch the power supply for the valve etc. from terminal block. This could result in electrical shock or fire.

For the installer

3 About the box


Keep the following in mind:

- At delivery, the unit **MUST** be checked for damage and completeness. Any damage or missing parts **MUST** be reported immediately to the claims agent of the carrier.
- Bring the packed unit as close as possible to its final installation position to prevent damage during transport.
- Prepare in advance the path along which you want to bring the unit to its final installation position.

3.1 To unpack and handle the fan coil unit


Use a sling of soft material or protective plates together with a rope when lifting the unit. This to avoid damage or scratches to the unit.

- Lift the unit by holding onto the hanger brackets without exerting any pressure on other parts, especially on drain piping and thermal insulation.

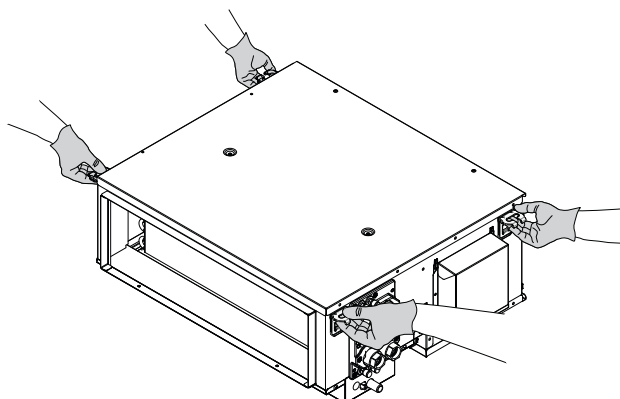


! NOTICE

Do NOT lift the unit by the valve actuators (a).

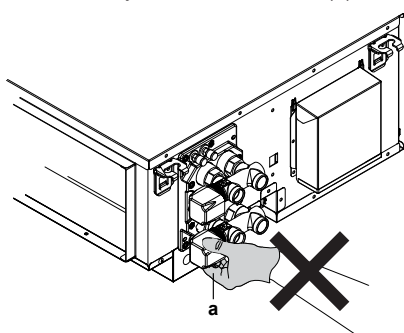


! NOTICE

Do NOT lift the unit by the drain pan socket (b).

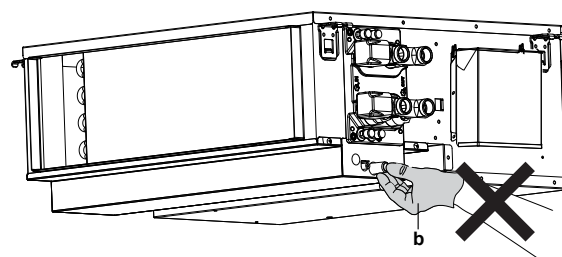


! NOTICE

Do NOT lift the unit by subdrain pan (c).

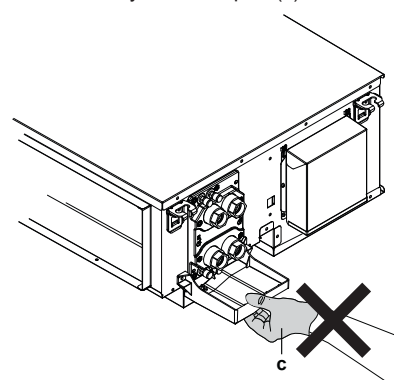

3.2 To remove the accessories from the fan coil unit

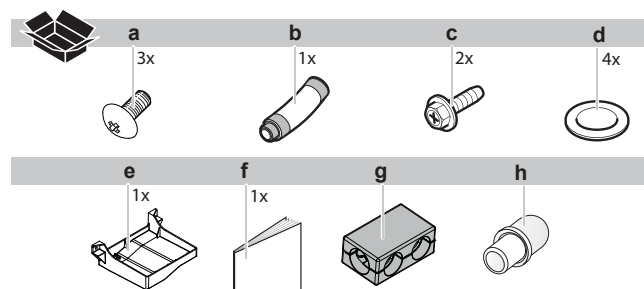

- a Screw M4 for sub drain pan 2x and drain hose 1x
- b Drain hose
- c Screw M5 for FWECSAP 2x
- d Gasket
- e Sub drain pan
- f Installation and operation manual
- g Thermal insulation for valves (2 pipe: 1x and 4 pipe: 2x) (*)
- h Flare cap
- * Only models with factory mounted valve


4 About the units and options

4 About the units and options

4.1 Identification

4.1.1 Identification label: Fan coil unit

Location

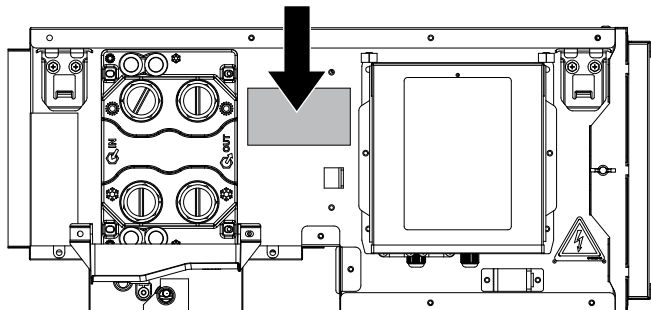

Model identification

Example: FW E 04 F B T N 5 V3 --

Code	Description
FW	Water fan coil unit
E	Duct Low ESP
F	Major model series
B	Minor model change
T	2 pipe
F	4 pipe
N	Without valve
V	3 way valve (ON/OFF - 230 V)
T	2 way valve (ON/OFF - 230 V)
5	Hendek factory
V1	1 Ph / 50 Hz / 220-240 V
-	No option
-	Left side water, left side electric connection
R	Right side water, right side electric connection

5 Unit installation

5.1 Preparing the installation site



WARNING

ALWAYS use non-flammable ducts, thermal insulations and couplings; flammable materials may cause a fire.




NOTICE

The unit must be installed ≥ 2.5 m from the floor.



NOTICE

The spacing between ceiling and unit should be ≥ 10 mm and the suction space should be ≥ 150 mm.

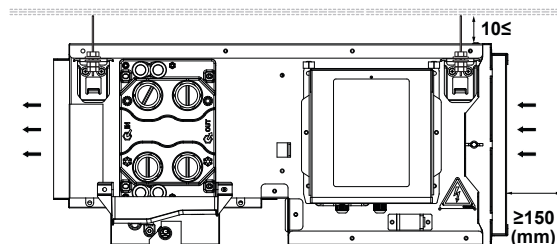

INFORMATION

The sound pressure level is less than 70 dBA.



CAUTION

Appliance is NOT accessible to the general public. Install it in a secured area, protected from easy access.

This unit is suitable for installation in a commercial and light industrial environment.



NOTICE

Where installation from below is NOT possible, such as very high ceilings, access to the unit for installation and service should be possible from the top of the ceiling.

Select an installation site that fulfills the following conditions and meets with your customer's approval.

- The space around the unit is adequate for maintenance and servicing. The space around the unit allows sufficient air circulation and air distribution. See space required for installation.
- Make sure the area is well ventilated. Do NOT block any ventilation openings.
- Make sure the installation site withstands the weight and vibration of the unit.
- Ensure that in the event of a water leak, no damage occurs to the installation space or its surroundings.
- Choose a location where the operation noise or the hot/cold air discharged from the unit will not disturb anyone and the location is selected according the applicable legislation.
- **Drainage.** Make sure condensation water can be evacuated properly.
- In places with weak reception, keep distances of 3 m or more to avoid electromagnetic disturbance of other equipment and use conduit tubes for power and transmission lines.
- **Fluorescent lights.** When installing a wireless remote control (user interface) in a room with fluorescent lights, mind the following to avoid interference:
 - Install the wireless remote control (user interface) as close as possible to the indoor unit.
 - Install the indoor unit as far as possible from the fluorescent lights.

Do NOT install the unit in places often used as work place. In case of construction works (e.g. grinding works) where a lot of dust is created, the unit MUST be covered.

Do not install or operate the unit in rooms mentioned below.



- Places with mineral oil, or filled with oil vapour or spray, like in kitchens (plastic parts may deteriorate).
- Where corrosive gas like sulphurous gas exists. Copper tubing and brazed spots may corrode.

- Where the air contains high levels of salt, such as that near the coast and where voltage fluctuates a lot (e.g. in factories). Also in vehicles or vessels.
- In places where there is machinery that emits electromagnetic waves. Electromagnetic waves may disturb the control system, and cause malfunction of the equipment.
- In places where there is a risk of fire due to the leakage of flammable gases (example: thinner or gasoline), carbon fibre, ignitable dust.
- The unit can NOT be installed in a bathroom.

5.2 Interchangeability


The direction of the product must be changed on the ground.

Remove the cover sheet metal on the side plate of the unit.

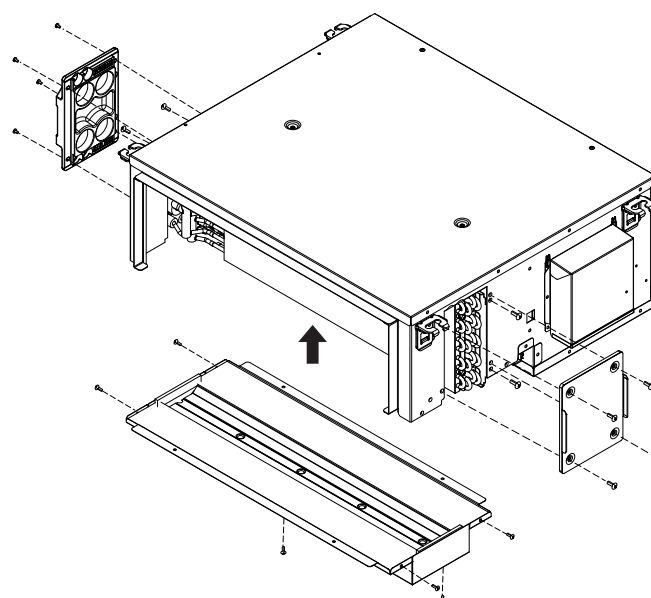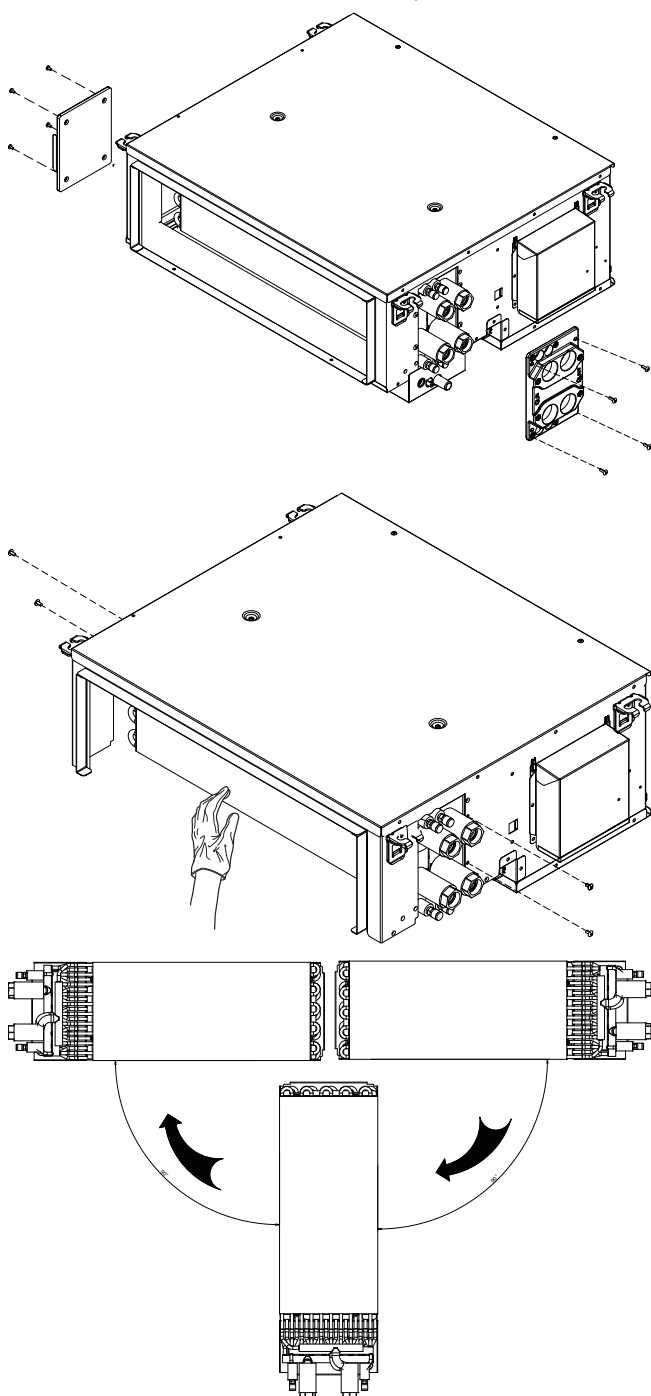

NOTICE


Always use upper air purges.

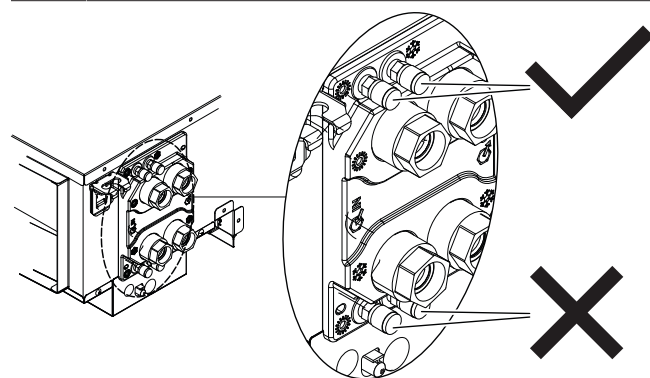

5.3 Mounting the unit

5.3.1 To install the suspension bolts

Use the pattern to determine the suspension bolt positions (upper part of the packing). Suspension bolt positions are indicated on the paper pattern. Holes can be drilled by putting the paper pattern on the ceiling.

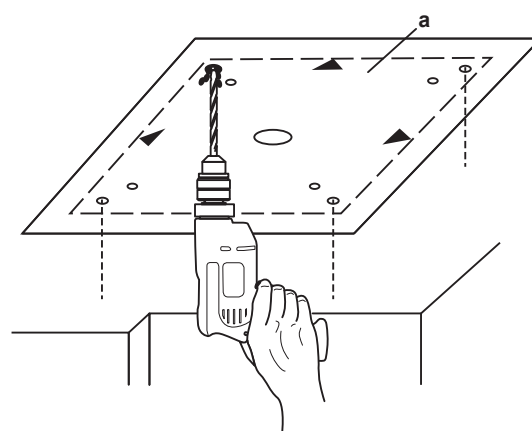


a Paper pattern for installation. (upper part of the packing)

5 Unit installation

5.3.2 To mount the unit


Make the required ceiling opening for installation in an applicable place. It may be necessary to reinforce the suspended ceiling frame to keep the ceiling level and to prevent it from vibrating.

Consult the builder for details.

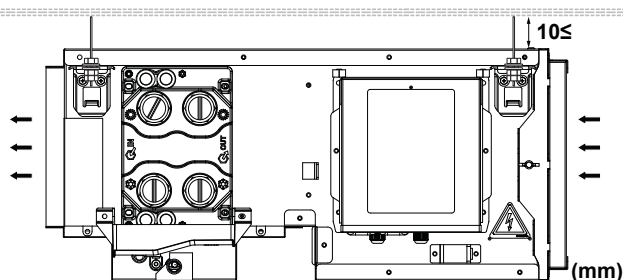


- **Ceiling strength.** Check whether the ceiling is strong enough to support the weight of the unit. If there is a risk, reinforce the ceiling before installing the unit.

- For existing ceilings, use anchors.
- For new ceilings, use sunken inserts, sunken anchors or other field supplied parts.

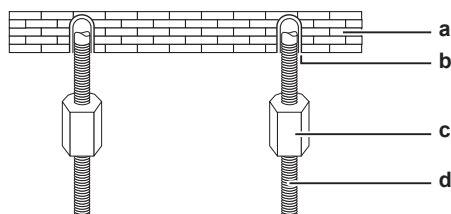


- a Ceiling slab
- b Anchor
- c Long nut or turn-buckle
- d Suspension bolt

- **Suspension bolts.** Use M8~M10 suspension bolts for installation. Attach the hanger bracket to the suspension bolt. Fix it securely using a nut and washer from the upper and lower sides of the hanger bracket.

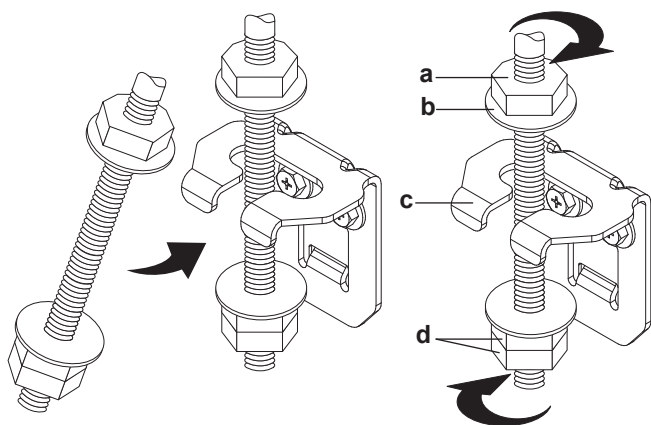


- a Nut (field supply)
- b Washer (field supply)
- c Hanger bracket
- d Double nut (field supply)

- Adjust the unit to the correct position for installation.

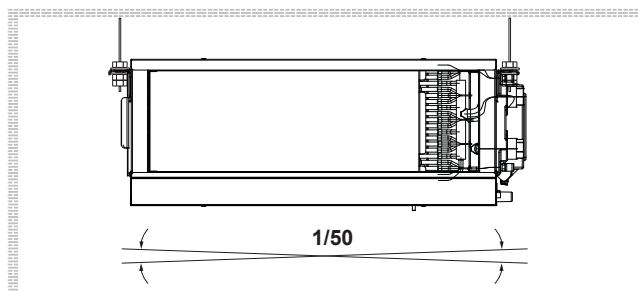

- Check if the unit is horizontally levelled.
- **Level.** Make sure the unit is level at all 4 corners using a level or a water-filled vinyl tube.

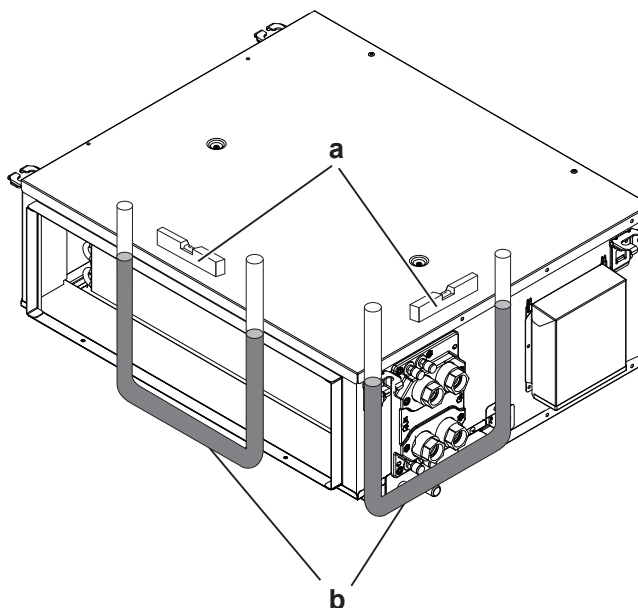

- a Level
- b Vinyl tube



NOTICE

Do NOT install the unit tilted. **Possible consequence:** If the unit is tilted against the direction of the condensate flow (the drain piping side is raised), water may drip.

5.4 Water piping installation

5.4.1 Preparing water piping

Before performing the water piping work, check the following points:

- The maximum water pressure is 1.6 MPa.
- The unit is equipped with a water inlet and water outlet for connection to the water circuit. The water circuit must be provided by an installer and must comply with the applicable legislation.
- The minimum water temperature is 5°C.
- The maximum water temperature is 90°C.
- Be sure to install components in the field piping that can withstand the water pressure and temperature.
- Provide adequate safeguards in the water circuit to ensure that the water pressure will never exceed the maximum allowable working pressure.
- Provide a proper drain for the pressure relief valve (if installed) to avoid any water from coming into contact with electrical parts.

- Provide shut-off valves at the unit so that normal servicing can be accomplished without draining the system.
- Provide drain taps at all low points of the system to permit complete draining of the circuit during maintenance or service to the unit.
- Provide air purge valves at all high points of the system. The valves shall be located at points which are easily accessible for servicing.
- Pipework shall be protected from physical damage.



NOTICE

Make sure water quality complies with EU directive 2020/2184.



NOTICE

Use of glycol is allowed, but the amount shall NOT exceed 40% of the volume. A higher amount of glycol may cause damage to the hydraulic components.



NOTICE

The unit is ONLY to be used in a closed water system. Application in an open water circuit can lead to excessive corrosion of the water piping.

5.4.2 Connecting water piping



CAUTION

Always use valves to control water circulation in the unit. If the fan coil unit is off, but water keeps circulating in the unit, condensation will form on the unit and water may drip.



NOTICE

Do not use excessive force when connecting the piping. This could deform the unit piping. Deformation of the piping can cause the unit to malfunction.




NOTICE


Make sure to insulate all piping. Any exposed piping might cause condensation.




DANGER: RISK OF BURNING/SCALDING

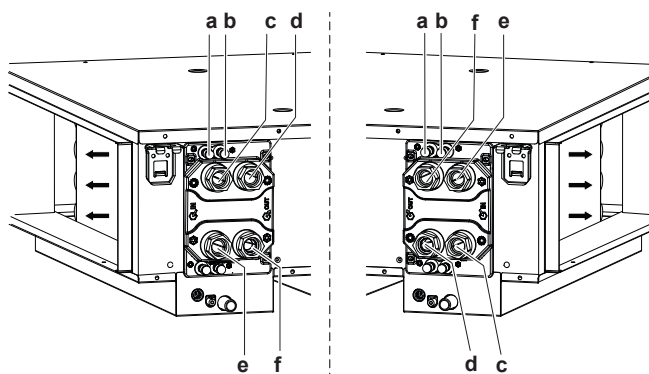


- a Heating air purge
- b Cooling air purge
- c Hot water inlet (3/4" female BSP)
- d Hot water outlet (3/4" female BSP)
- e Cooling inlet (3/4" female BSP)
- f Cooling outlet (3/4" female BSP)

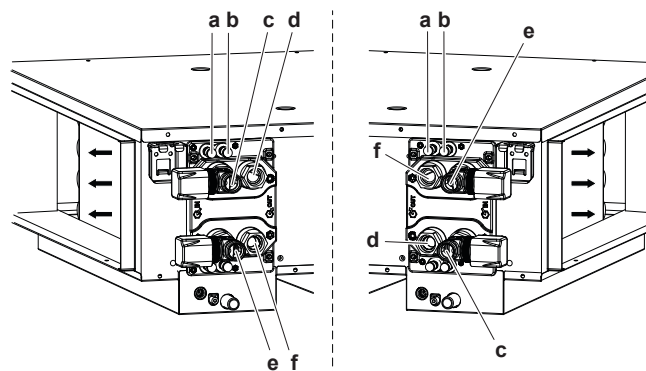

- a Heating air purge
- b Cooling air purge
- c Hot water inlet (DN3/4")
- d Hot water outlet (3/4" female BSP)
- e Cooling inlet (DN3/4")
- f Cooling outlet (3/4" female BSP)

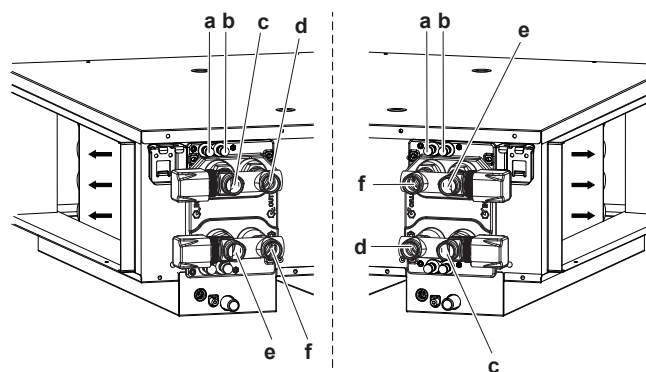


- a Cooling air purge
- b Heating air purge
- c Hot water inlet (DN3/4")
- d Hot water outlet (DN3/4")
- e Cold water inlet (DN3/4")
- f Cold water outlet (DN3/4")

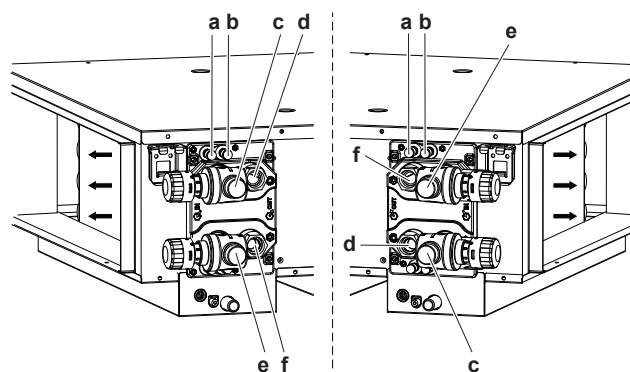


- a Heating air purge
- b Cooling air purge
- c Hot water inlet (DN3/4")
- d Hot water outlet (3/4" female BSP)
- e Cooling inlet (DN3/4")
- f Cooling outlet (3/4" female BSP)

5 Unit installation

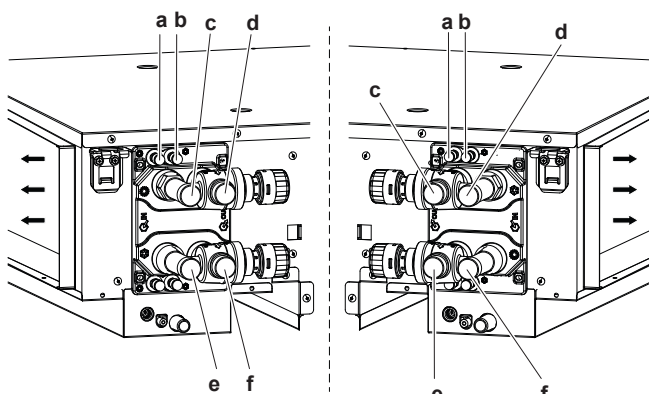

- a Heating air purge
- b Cooling air purge
- c Hot water inlet (DN3/4")
- d Hot water outlet (DN3/4")
- e Cold water inlet (DN3/4")
- f Cold water outlet (DN3/4")

To fill the water circuit

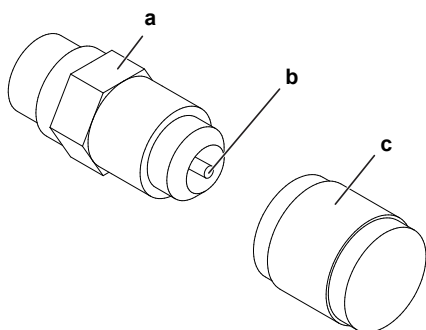

- a Air purge
- b Pressure relief valve
- c Cap

During filling, it might not be possible to remove all air in the system. Remaining air can be removed during the first operating hours of the unit. The air can be removed from the unit through the manual air purge valve.

- 1 Open the cap.
- 2 Push the pressure relief valve to purge air from the unit water circuit(s).
- 3 Close the cap.
- 4 Additional filling with water afterwards might be required (but never through the air purge valve).



NOTICE


Air in the water circuit can cause malfunctioning. During filling, it may not be possible to remove all the air from the circuit. Remaining air will be removed through the automatic air purge valves during the initial operating hours of the system. Additional filling with water afterwards may be required.



NOTICE

Make sure water quality complies with EU directive 2020/2184.

- **Pipe size.** Keep the pipe size equal to or greater than that of the connecting pipe (vinyl pipe of 25 mm nominal diameter and 32 mm outer diameter).
- **Slope.** Make sure the drain piping slopes down (at least 1/100) to prevent air from being trapped in the piping. Use hanging bars as shown.
- **Condensation.** Take measures against condensation. Insulate the complete drain piping in the building.
- **Slope.** Make sure the drain piping slopes down (at least 1/50) to prevent air from being trapped in the piping. Use hanging bars as shown.

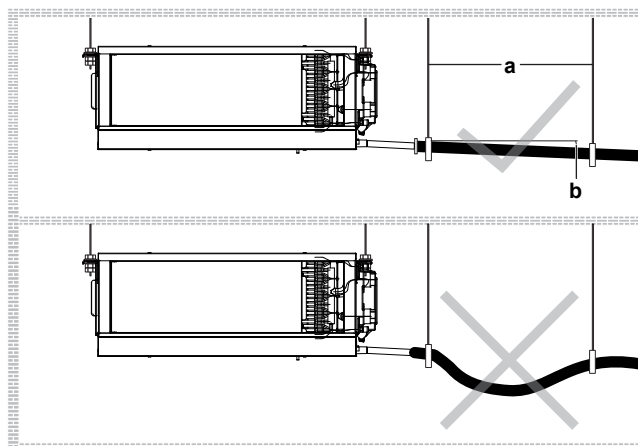

- ✓ a Hanging bar Allowed
- ✗ Not allowed

5.5.2 Connecting the drain piping


To connect the drain piping



NOTICE

Incorrect connection of the drain hose might cause leaks, and damage the installation space and surroundings.

- 1 Push the drain hose as far as possible over the drain socket.
- 2 Tighten the screw from drain hose to drain pan's surface.
- 3 Check for water leaks.

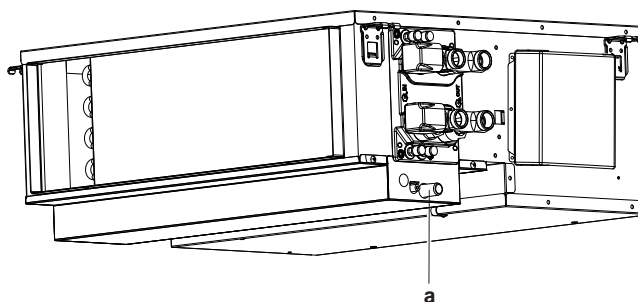

- a Drain socket


- 4 Insert the drain hose and tighten with fixing screw (accessory set).

5.5 Drain piping installation


5.5.1 Guidelines when installing the drain piping

General guidelines

- **Pipe length.** Keep drain piping as short as possible.

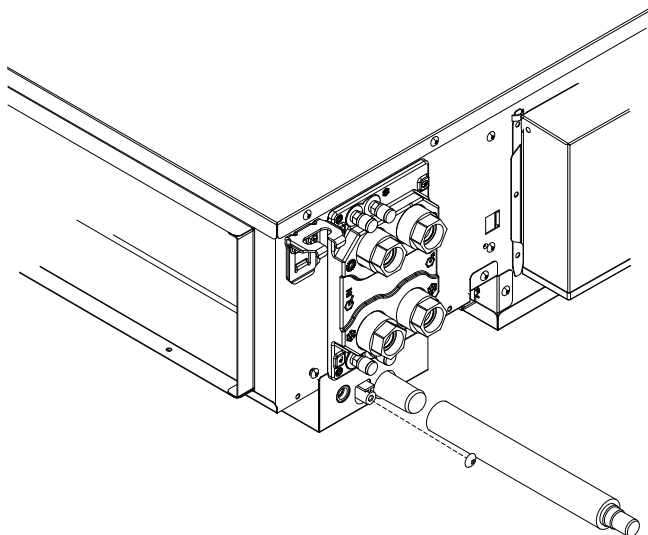**NOTICE**

The unit must be used with a drain hose. (Forgetting to tighten this may cause water leakages and vibrations.)

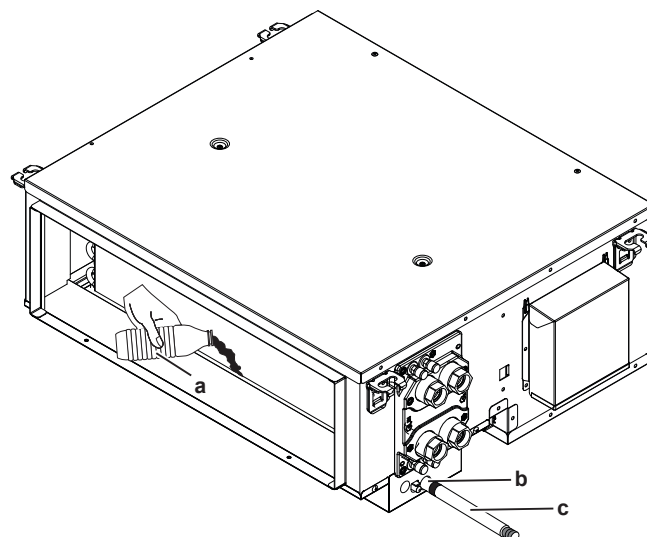

- a Plastic watering can
- b Drain outlet (use this outlet to drain water from drain pan)
- c Drain hose


5.6 Optional equipment installation

5.6.1 Preparing of optional equipment

**INFORMATION**

Optional equipment. When installing optional equipment, also read the installation manual of the optional equipment. Depending on the field conditions, it might be easier to install the optional equipment first.

Optional equipment	Identification code
G2 filter	EKAF02G5A
	EKAF03G5A
2-way valve- ON/OFF (AC 230 V)	EK02WV2V3W5A
	EK04WV2V3C5A
	EK06WV2V3C5A
3-way valve- ON/OFF (AC 230 V)	EK02WV3V3W5A
	EK04WV3V3C5A
	EK06WV3V3C5A
Proportional valve (AC 24 V) 3 way – 4 port valve	EK02P3V24W5A
	EK04P3V24C5A
	EK06P3V24C5A
Remote controller	FWEC3A
Remote controller (for 2 pipe)	FWEC2T
Remote controller (for 4 pipe)	FWEC4T
Remote controller (panel control board)	FWEC SAP
Remote controller	FWEC SAC
Remote controller	FWTOUCHW
	FWTOUCHB
	FWTOUCHG
Valve cable kit	EKER015A

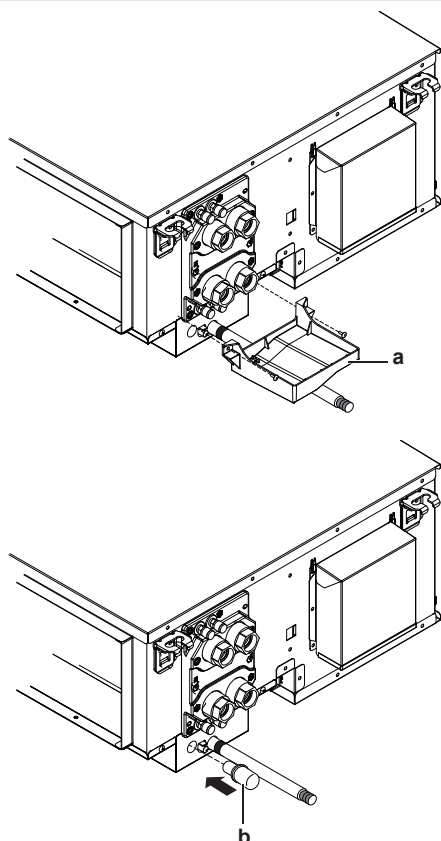**NOTICE**

If the sub drain pan (a) is not used, the sub drain pan hole should be closed with a cap (b).

When electrical wiring is already finished

- 1 Start cooling operation.
- 2 Gradually pour approximately 1 l of water through the air discharge outlet, and check for leaks.


6 Electrical installation


5.6.2 Connecting the optional equipment


Technical specifications of the valves


Kvs value	Max. operation pressure PN (bar)	Actuator power supply
2.8	16	1 Ph, 230 V, 50-60 Hz
4		
6		

6 Electrical installation


**DANGER: RISK OF ELECTROCUTION**


**WARNING**
ALWAYS use multicore cable for power supply cables.


**WARNING**
Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.


**WARNING**
If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

6.1 Preparing electrical wiring


**WARNING**
All field wiring and components **MUST** be installed by a licensed electrician and **MUST** comply with the applicable legislation.

**DANGER: RISK OF ELECTROCUTION**


**WARNING**
A main switch or other means for disconnection, having a contact separation in all poles, **MUST** be incorporated in the fixed wiring in accordance with the applicable legislation.


**CAUTION**

- When connecting the power supply: connect the earth cable first, before making the current-carrying connections.
- When disconnecting the power supply: disconnect the current-carrying cables first, before separating the earth connection.
- The length of the conductors between the power supply stress relief and the terminal block itself **MUST** be as such that the current-carrying wires are tightened before the earth wire is in case the power supply is pulled loose from the stress relief.


**WARNING**

- After finishing the electrical work, confirm that each electrical component and terminal inside the switch box is connected securely.
- Make sure all covers are closed before starting up the unit.


**WARNING**
Do **NOT** apply any permanent inductive or capacitance loads to the circuit without ensuring that this will **NOT** exceed the permissible voltage and current permitted for the equipment in use.

**NOTICE**
The equipment described in this manual may cause electronic noise generated from radio-frequency energy. The equipment complies with specifications that are designed to provide reasonable protection against such interference. However, there is no guarantee that interference will not occur in a particular installation.

It is therefore recommended to install the equipment and electric wires in such a way that they keep a proper distance from stereo equipment, personal computers, etc.

**DANGER: RISK OF ELECTROCUTION**

- Turn **OFF** all power supply before removing the fan coil unit terminal cover when connecting electrical wiring or touching electrical parts.
- Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage **MUST** be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.
- Do **NOT** touch electrical components with wet hands.
- Do **NOT** leave the unit unattended when the terminal cover is removed.

**WARNING**

- ONLY** use copper wires.
- Make sure the field wiring complies with the applicable legislation.
- All field wiring **MUST** be performed in accordance with the wiring diagram supplied with the product.
- NEVER** squeeze bundled cables and make sure they do **NOT** come into contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections.
- Make sure to install earth wiring. Do **NOT** earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shock.
- Make sure to install the required fuses or circuit breakers.
- Make sure to install an earth leakage protector. Failure to do so may cause electrical shock or fire.

6-1 Field wiring specifications

	2 Pipe									
	04	05	06	08	10	12	14	16	20	24
Maximum operating current (A)	0.27	0.27	0.38	0.44	0.48	0.53	0.81	0.88	0.88	1.06
Maximum operating current (A) with valves ^(a)	0.34	0.34	0.45	0.51	0.55	0.60	0.88	0.95	0.95	1.13
Recommended overcurrent fuse (A)	5									
Phase	1									

	2 Pipe									
	04	05	06	08	10	12	14	16	20	24
Frequency (Hz)	50									
Voltage (V)	220~240									
Voltage tolerance (%)	±10									
Wire size (cross section mm ²)	0.75~1.25									
Earth leakage circuit breaker	Must comply with applicable legislation									


^(a) In case of usage Daikin brand valves "Model Nr should be indicated".


6-2 Field wiring specifications


	4 Pipe									
	04	05	06	08	10	12	14	16	20	24
Maximum operating current (A)	0.26	0.26	0.37	0.43	0.50	0.56	0.79	0.87	0.83	1.04
Maximum operating current (A) with valves ^(a)	0.33	0.33	0.44	0.50	0.57	0.63	0.86	0.94	0.90	1.11
Recommended overcurrent fuse (A)	5									
Phase	1									
Frequency (Hz)	50									
Voltage (V)	220~240									
Voltage tolerance (%)	±10									
Wire size (cross section mm ²)	0.75~1.25									
Earth leakage circuit breaker	Must comply with applicable legislation									


^(a) In case of usage Daikin brand valves "Model Nr should be indicated".


6.2 Connecting the electrical wiring

 **DANGER: RISK OF ELECTROCUTION**

 **WARNING**
 ALWAYS use multicore cable for power supply cables.

 **WARNING**
 Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.

 **WARNING**
 If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

 **NOTICE**
 Precautions when laying power wiring:



- Do NOT connect wiring of different thicknesses to the power terminal block (slack in the power wiring may cause abnormal heat).
- When connecting wiring which is the same thickness, do as shown in the figure above.
- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will damage the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.



NOTICE

- Follow the wiring diagram (delivered with the unit, located at the inside of the service cover).
- For instructions on how to connect the optional equipment, see the installation manual delivered with the optional equipment.
- Make sure the electrical wiring does NOT obstruct proper reattachment of the service cover.

It is important to keep the power supply and the interconnection wiring separated from each other. In order to avoid any electrical interference, the distance between both wirings should ALWAYS be at least 50 mm.



NOTICE

Be sure to keep the power line and interconnection line apart from each other. Interconnection wiring and power supply wiring may cross, but may NOT run parallel.

7 Commissioning



NOTICE

Do NOT interrupt the test run.

7.1 Checklist before commissioning

- After the installation of the unit, check the items listed below.
- Close the unit.
- Power up the unit.

<input type="checkbox"/>	You read the complete installation instructions, as described in the installer reference guide .
<input type="checkbox"/>	The indoor units are properly mounted.
<input type="checkbox"/>	There are NO missing phases or reversed phases .

8 User safety instructions

<input type="checkbox"/>	The system is properly earthed and the earth terminals are tightened.
<input type="checkbox"/>	The fuses or locally installed protection devices are installed according to this document, and have NOT been bypassed.
<input type="checkbox"/>	The power supply voltage matches the voltage on the identification label of the unit.

<input type="checkbox"/>	There are NO loose connections or damaged electrical components in the switch box.
<input type="checkbox"/>	There are NO damaged components or squeezed pipes on the inside of the indoor and outdoor units.
<input type="checkbox"/>	The correct pipe size is installed and the pipes are properly insulated.

For the user

8 User safety instructions

Always observe the following safety instructions and regulations.

8.1 Instructions for safe operation



CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. When the fan is rotating at high speed, it will cause injury.



CAUTION: Pay attention to the fan!

It is dangerous to inspect the unit while the fan is running.

Make sure to turn OFF the main switch before executing any maintenance task.



CAUTION

After a long use, check the unit stand and fitting for damage. If damaged, the unit may fall and result in injury.



CAUTION

It is unhealthy to expose your body to the air flow for a long time.



CAUTION

NEVER touch the internal parts of the controller.



DANGER: RISK OF ELECTROCUTION

To clean the air conditioner or air filter, be sure to stop operation and turn all power supplies OFF. Otherwise, an electrical shock and injury may result.



WARNING

Keep any required ventilation openings clear of obstructions.



WARNING

Stop operation and shut OFF the power if anything unusual occurs (burning smells etc.).

Leaving the unit running under such circumstances may cause breakage, electrical shock or fire. Contact your dealer.



WARNING

NEVER touch the air outlet or the horizontal blades while the swing flap is in operation. Fingers may become caught or the unit may break down.



WARNING

Do NOT place a flammable spray bottle near the air conditioner and do NOT use sprays near the unit. Doing so may result in a fire.



WARNING

Before operating the unit, be sure the installation has been carried out correctly by an installer.



WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.

9 About the system



WARNING

Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.

**NOTICE**

Do NOT use the system for other purposes. In order to avoid any quality deterioration, do NOT use the unit for cooling precision instruments, food, plants, animals, or works of art.

**NOTICE**

For future modifications or expansions of your system:

A full overview of allowable combinations (for future system extensions) is available in technical engineering data and should be consulted. Contact your installer to receive more information and professional advice.

10 Before operation

**WARNING**

This unit contains electrical and hot parts.

**WARNING**

Before operating the unit, be sure the installation has been carried out correctly by an installer.

**CAUTION**

NEVER expose little children, plants or animals directly to the airflow.

This operation manual is for the following systems with standard control. Before initiating operation, contact your dealer for the operation that corresponds to your system type and mark. If your installation has a customised control system, ask your dealer for the operation that corresponds to your system.

Operation modes:

- Heating and cooling (air to air).
- Fan only operation (air to air).

This operation manual offers a non-exhaustive overview of the main functions of the system.

For more information about the user interface, see the operation manual of the installed user interface.

11 Operation

11.1 Operation range

The following conditions are standard operating limits. For different conditions, please consult the dealer.

Mode	Condition	Air temperature limit, (DB/WB)	Water temperature limit, (in/out)	Water delta T, ΔT
Cooling (°C)	Min.	15/6 (RH%20)	5/8	3 to 10
	Max.	33/26 (RH%58)	18/28	
Heating (°C)	Min.	15/**	35/30	5 to 20
	Max.	27/**	90/70	

12 Energy saving and optimum operation

Observe the following precautions to ensure the system operates properly.

- Adjust the air outlet properly and avoid direct air flow to room inhabitants.

- Adjust the room temperature properly for a comfortable environment. Avoid excessive heating or cooling.
- Prevent direct sunlight from entering a room during cooling operation by using curtains or blinds.
- Ventilate often. Extended use requires special attention to ventilation.
- Keep doors and windows closed. If the doors and windows remain open, air will flow out of your room causing a decrease in the cooling or heating effect.
- Be careful NOT to cool or heat too much. To save energy, keep the temperature setting at a moderate level.
- NEVER place objects near the air inlet or the air outlet of the unit. Doing so may cause a reduced heating/cooling effect or stop operation.
- Condensation may form if the humidity is above 80% or if the drain outlet gets blocked.

**NOTICE**

Do NOT use the system for other purposes. In order to avoid any quality deterioration, do NOT use the unit for cooling precision instruments, food, plants, animals, or works of art.

**CAUTION**

Do NOT operate the system when using a room fumigation-type insecticide. Chemicals could collect in the unit, and endanger the health of people who are hypersensitive to chemicals.

13 Maintenance and service

13.1 Maintenance safety precautions

**DANGER: RISK OF BURNING/SCALDING****DANGER: RISK OF ELECTROCUTION****NOTICE**

Keep the air filter clean and check the airflow rate periodically.

**WARNING**

- Before carrying out any maintenance or repair activity, ALWAYS switch off the circuit breaker on the supply panel.
- Make sure you do NOT touch a conductive section.
- Do NOT rinse the outside of the unit. This may cause electric shocks or fire.

To clean the outside of your fan coil unit:

- 1 Switch off the fan coil unit.
- 2 Clean the outside of the fan coil unit with a soft cloth.

**CAUTION**

- Do NOT obstruct the air outlet or inlet of the unit in any way.
- Do NOT place damp or wet clothing on the air outlet grille of the unit.
- Do NOT pour liquids inside the equipment.

Never clean your fan coil unit with:

- any aggressive chemical solvent,
- water hotter than 50°C.

13 Maintenance and service

For maintenance of your fan coil unit, contact your installer or service company.

13.2 Precautions for maintenance and service

! NOTICE

NEVER inspect or service the unit by yourself. Ask a qualified service person to perform this work. However, as end user, you may clean the air filter, suction grille, air outlet and outside panels.

! WARNING

NEVER replace a fuse with a fuse of a wrong ampere ratings or other wires when a fuse blows out. Use of wire or copper wire may cause the unit to break down or cause a fire.

! CAUTION

After a long use, check the unit stand and fitting for damage. If damaged, the unit may fall and result in injury.

! NOTICE

Do NOT wipe the controller operation panel with benzine, thinner, chemical dust cloth, etc. The panel may get discoloured or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. Wipe it with another dry cloth.

! CAUTION

Before accessing terminal devices, make sure to interrupt all power supply.

! NOTICE

When cleaning the heat exchanger, make sure to remove the switch box, fan motor, drain pump and float switch. Water or detergent might deteriorate the insulation of electronic components and result in burnout of these components.

! WARNING

Be careful with ladders when working in high places.

13.3 Cleaning the air filter, suction grille, air outlet and outside panels

! CAUTION

Turn off the unit before cleaning the air filter, suction grille, air outlet and outside panels.

! NOTICE

- Do NOT scrub firmly when washing the blade with water. **Possible consequence:** The surface sealing peels off.

Clean with a soft cloth. If it is difficult to remove stains, use water or a neutral detergent.

13.3.1 To clean the air filter

When to clean the air filter:




- Rule of thumb: Clean every 6 months. If the air in the room is extremely contaminated, increase the cleaning frequency.
- If the dirt becomes impossible to clean, change the air filter (= optional equipment).

How to clean the air filter:


! NOTICE

Do NOT use water of 50°C or higher. **Possible consequence:** Discoloration and deformation.

- Switch off the power supply. The air filter can be installed on both the right side and left sides. Remove the filter by sliding, as shown below.

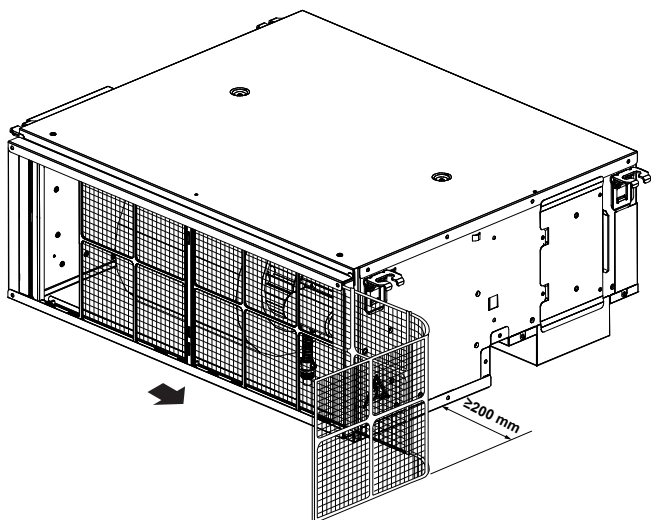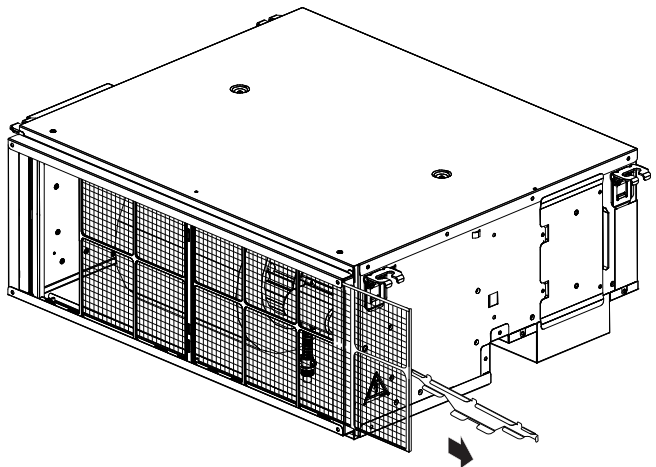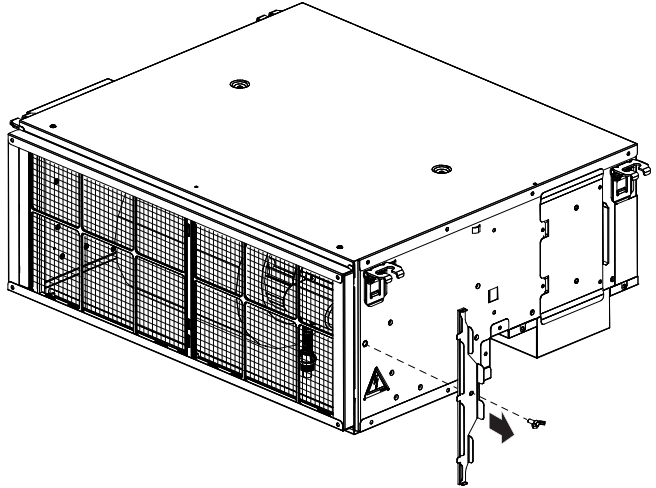

- Clean the air filter. Use a vacuum cleaner or wash with water. If the air filter is very dirty, use a soft brush and neutral detergent.

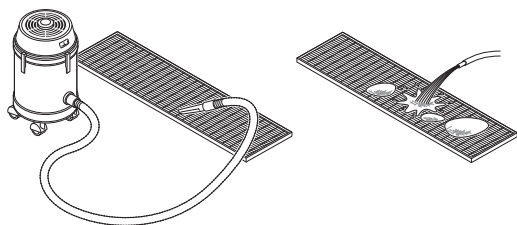

- 3 Dry the air filter in the shadow.
- 4 Reattach the air filter and close the suction grille.

13.4 Maintenance after a long stop period

E.g., at the beginning of the season.

- Check and remove everything that might be blocking inlet and outlet vents of indoor units and outdoor units.
- Clean air filters and casings of indoor units (see "[13.3.1 To clean the air filter](#)" [▶ 16] and To clean the air outlet and outside panels).

13.5 Maintenance before a long stop period

E.g., at the end of the season.

- Let the indoor units run in fan-only operation for about half a day in order to dry the interior of the units. Refer to About cooling, heating, fan only, and automatic operation for details on fan-only operation.
- Turn off the power. The user interface display disappears.
- Clean air filters and casings of indoor units (see "[13.3.1 To clean the air filter](#)" [▶ 16] and To clean the air outlet and outside panels).

13.6 After-sales service and warranty

13.6.1 Recommended maintenance and inspection

Since dust collects when using the unit for several years, performance of the unit will deteriorate to some extent. As taking apart and cleaning interiors of units requires technical expertise and in order to ensure the best possible maintenance of your units, we recommend to enter into a maintenance and inspection contract on top of normal maintenance activities. Our network of dealers has access to a permanent stock of essential components in order to keep your unit in operation as long as possible. Contact your dealer for more information.

When asking your dealer for an intervention, always state:

- The complete model name of the unit.
- The manufacturing number (stated on the nameplate of the unit).
- The installation date.
- The symptoms or malfunction, and details of the defect.



WARNING

Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.

13.6.2 Shortened maintenance and replacement cycles

Shortening of "maintenance cycle" and "replacement cycle" needs to be considered in following situations:

The unit is used in locations where:

- Heat and humidity fluctuate out of the ordinary.
- Power fluctuation is high (voltage, frequency, wave distortion, etc.) (the unit cannot be used if power fluctuation is outside the allowable range).
- Bumps and vibrations are frequent.
- Dust, salt, harmful gas or oil mist such as sulphurous acid and hydrogen sulfide may be present in the air.
- The machine is started and stopped frequently or operation time is long (sites with 24 hour air-conditioning).

Recommended replacement cycle of wear parts

Component	Inspection cycle	Maintenance cycle (replacements and/or repairs)
Air filter	1 year	5 years
High efficiency filter		1 year
Fuse		10 years
Pressure containing parts		In case of corrosion, contact your local dealer.



INFORMATION

Damage due to taking apart or cleaning interiors of units by anyone other than our authorised dealers may not be included in the warranty.

14 Troubleshooting

If one of the following malfunctions occurs, take the measures shown below and contact your dealer.

The system **MUST** be repaired by a qualified service person.

Malfunction	Measure
If a safety device such as a fuse, a breaker or an earth leakage breaker frequently actuates or the ON/OFF switch does not properly work.	Turn off the main power switch.
If water leaks from the unit.	Stop the operation.
The operation switch does not work well.	Turn off the power.

If the system does NOT operate properly except for the above mentioned cases and none of the above mentioned malfunctions is evident, investigate the system in accordance with the following procedures.

Malfunction	Measure
If the system does not operate at all.	<ul style="list-style-type: none"> ▪ Check if there is no power failure. Wait until power is restored. ▪ Check if no fuse has blown or breaker is activated. Change the fuse or reset the breaker if necessary.

15 Disposal

Malfunction	Measure
The system operates but cooling or heating is insufficient.	<ul style="list-style-type: none"> Check if air inlet or outlet of outdoor or indoor unit is not blocked by obstacles. Remove any obstacles and make sure the air can flow freely. Check if the air filter is not clogged (see "13.3.1 To clean the air filter" [p 16]). Check the temperature setting. Check the fan speed setting on your user interface. Check for open doors or windows. Close doors and windows to prevent wind from coming in. Check if there are too many occupants in the room during cooling operation. Check if the heat source of the room is excessive. Check if direct sunlight enters the room. Use curtains or blinds. Check if the air flow angle is proper.

After checking all the items above, if it is impossible to fix the problem yourself, contact your installer and state the symptoms, the complete model name of the unit (with manufacturing number if possible) and the installation date.

14.1 To solve the problems with your fan coil unit

Your fan coil unit does not function

If your fan coil unit does not function:

Check:	If yes,
Has the fan coil unit been switched OFF ?	Switch the fan coil unit ON .
Is there a power failure?	Restore the power supply.
Has the circuit breaker (fuse) been tripped?	Contact your installer or service company.

Your fan coil unit does not cool or heat well

If your fan coil unit does not cool or heat well:

Check:	If yes,
Is there an obstacle near the air inlet or air outlet?	Remove the obstacle.
Are any doors and windows open?	Close doors and windows.
Is the fan coil unit running at low speed ?	Select medium speed or high speed .
Are the air filters dirty?	Contact your installer or service company.

Your fan coil unit leaks water

Shut down the unit and contact your installer or service company.

When your fan coil unit does not function well, you can try to solve any problem with the corrective actions in this chapter.

If the problem persists or is not addressed in this chapter, contact your installer or service company.

14.2 Relocation

Contact your dealer to remove and reinstall the entire unit. Moving units requires technical expertise.

15 Disposal

- Units are marked with the following symbol:



This means that electrical and electronic products may NOT be mixed with unsorted household waste. Do NOT try to dismantle the system yourself: dismantling the system, treatment of the refrigerant, of oil and of other parts MUST be done by an authorised installer and MUST comply with applicable legislation.

Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.





NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.

After installation, the installer is obliged to verify correct operation. In case something is wrong with the unit and it does not operate, contact your local dealer.

Use the proper tool to remove the screws. The product can be disassembled as shown below.

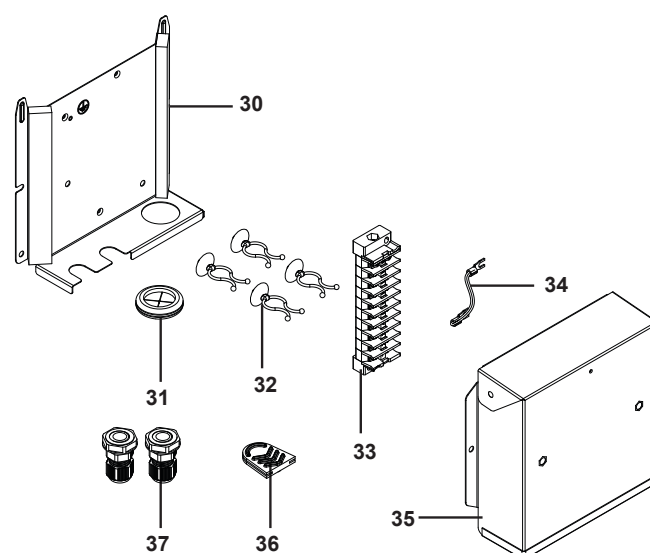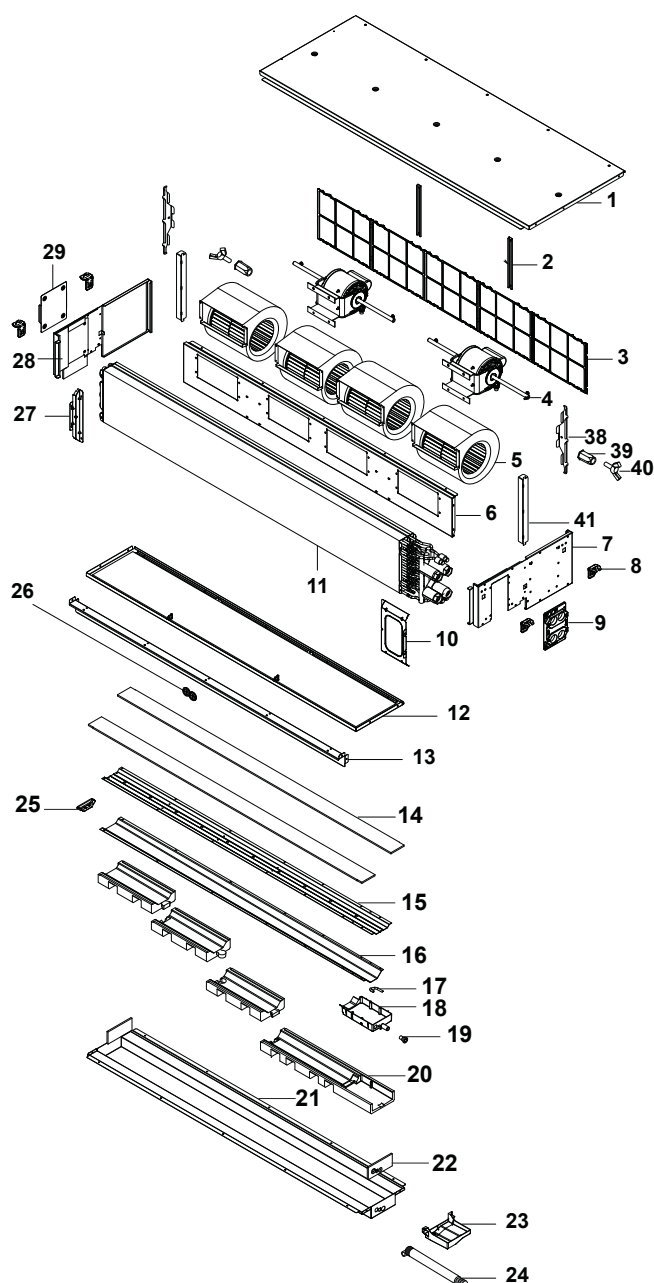


Materials	Item
Electrical part (fan motor + capacitor)	4
Aluminium (fin) + copper (tube) + galvanised steel (plate) + brass+plastic foam	11
Plastic	9, 18, 23, 24, 32, 37
Plastic foam	14, 22
Plastic + metal	33, 34
Plastic (frame) + plastic (net)	3
Galvasined steel	2, 5, 6, 8, 13, 15, 16, 21, 27, 39, 40, 41
Galvasined steel + plastic foam	1, 7, 10, 12, 28, 29, 30, 35, 38
Rubber	19, 25, 26, 31, 36
EPP	20
Copper	17

16 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

16.1 Wiring diagram

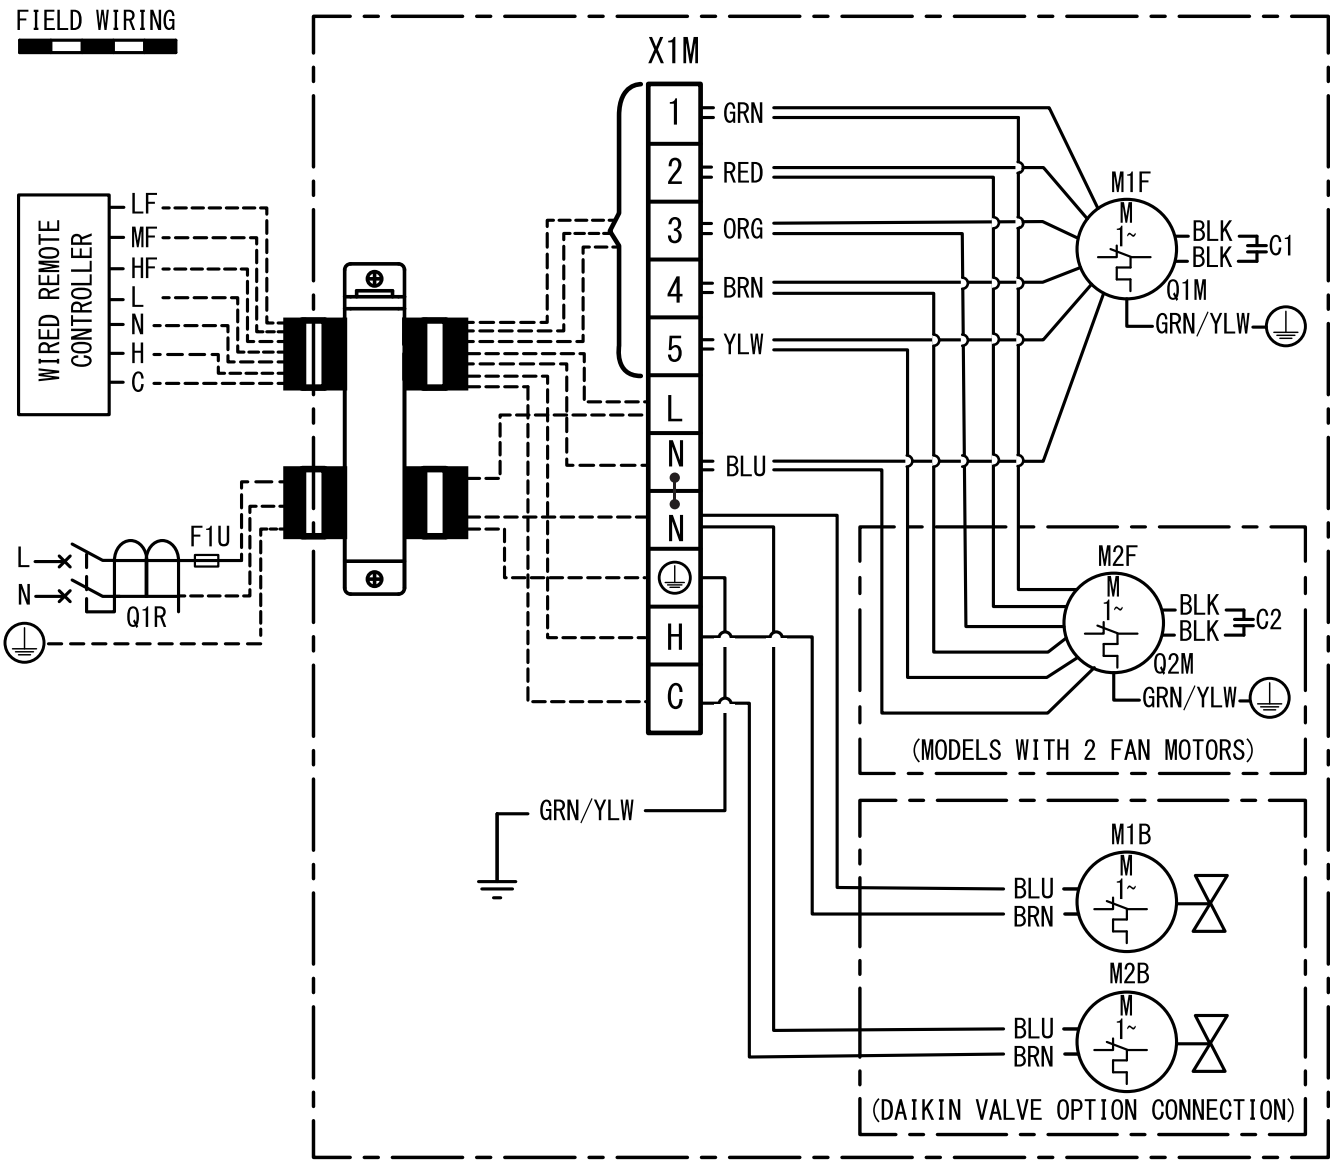

Legend for wiring diagrams:

C1 , C2	Capacitor
F1U	Field fuse
M1F, M2F	Fan motor
M1B	Heating actuator
M2B	Cooling actuator
Q1M , Q2M	Thermal protector
Q1R	Earth leakage breaker
X1M	Terminal strip
L	Live
N	Neutral
1	Lowest speed
5	Highest speed
H	Heating valve
C	Cooling valve
LF	Low fan speed
MF	Medium fan speed
HF	High fan speed

	Protective earth
	Earth

Colours:


BLK	Black
BLU	Blue
BRN	Brown
GRN	Green
ORG	Orange
RED	Red
YLW	Yellow

Notes:


- : Terminal block : Field wiring.
- Refer to installation manual for power requirement

16.2 Dimensions



Overview

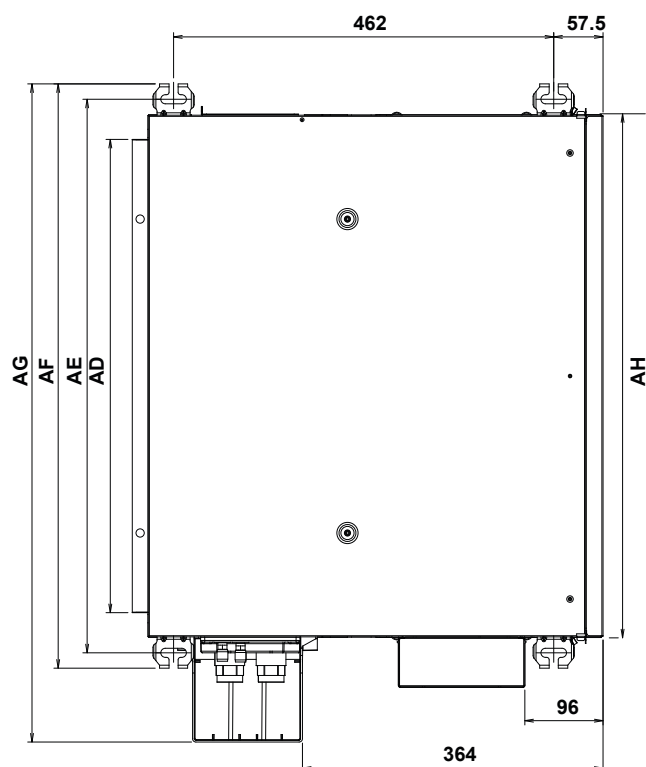

MODEL	AD	AE	AF	AG	AH
FWE04&05&06&08&10&12F	572	670	707	797	633
FWE08&10&12F	877	975	1012	1102	938
FWE14&16F	1187	1285	1322	1412	1248
FWE20&24F	1487	1585	1622	1712	1548

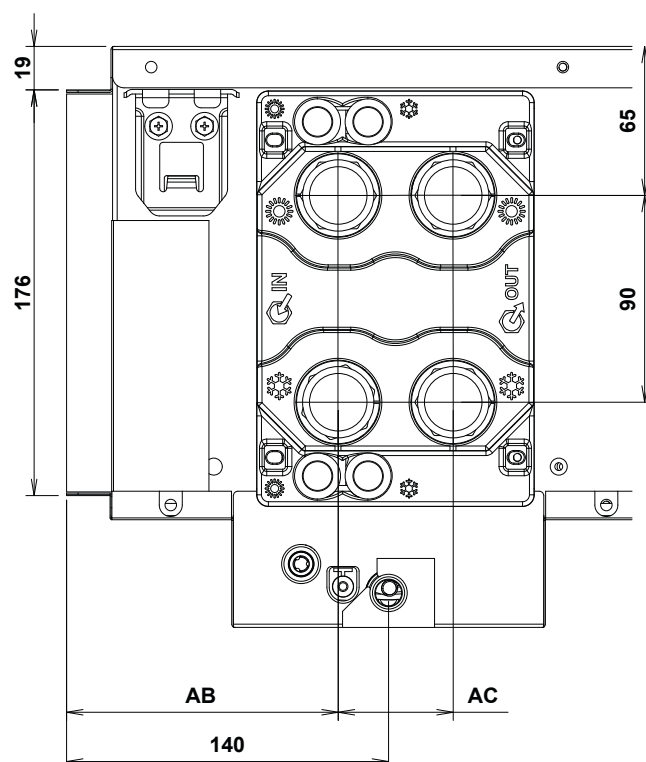

MODEL	AB	AC
FWE04&05&06&08&10&12F	118	50
FWE14&16&20&24F	121	44

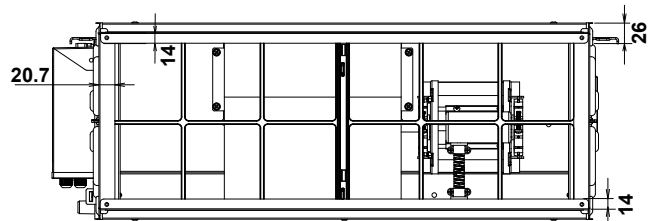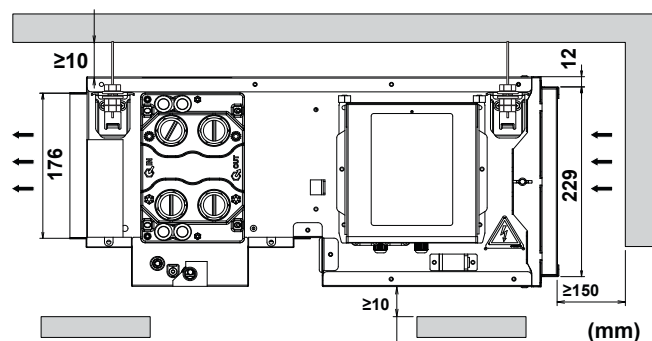

17 Information requirements for ecodesign

Prated,c	Prated,c	Prated,h	Pelec	LWA
<div><div>(GB) Cooling capacity (sensible)</div><div>(D) Kühlleistung (sensibel)</div><div>(F) Puissance de rafraîchissement (sensible)</div><div>(NL) Koelcapaciteit (voelbaar)</div><div>(E) Capacidad de refrigeración (sensibilidad)</div><div>(I) Capacità di raffreddamento (sensibile)</div><div>(GR) Ατρόδοση ψύξης (αυθέρνιση)</div><div>(P) Capacidade de arrefecimento (sensível)</div><div>(TR) Soğutma kapasitesi (duyarlı)</div><div>(RU) Холодopроизводительность (явная)</div><div>(S) Kyliningskapacitet (känslig)</div><div>(N) Avkjølingskapasitet (følbart)</div><div>(CZ) Chladicí výkon (citelný)</div><div>(HR) Kapacitet hlađenja (osjetljivo)</div><div>(H) Hűtési teljesítmény (érzékeny)</div><div>(RO) Capacitate de răcire (fără dezumidificare)</div><div>(SL) Moč hlađenja (zaznavna)</div><div>(SK) Kapacita chladenia (učelná)</div><div>(ES) Capacidad de refrigeración (sensibilidad)</div><div>(PL) Wydajność chłodnicza (jawna)</div><div>(DK) Kølekapacitet (mærkbart)</div><div>(FIN) Jäähdytyskapasiteetti (järkevä)</div><div>(EST) Jahutusvõimsus (mõeldukas)</div><div>(LV) Dzesēšanas kapacitāte (jūtama)</div><div>(LT) Vėsinimo galia (tikroji)</div><div>(AL) Kapaciteti i ftohjes (në gjendje glumi)</div><div>(SRB) Kapacitet hlađenja (opipljiv)</div></div>	<div><div>(GB) Cooling capacity (latent)</div><div>(D) Kühlleistung (latent)</div><div>(F) Puissance de rafraîchissement (latente)</div><div>(NL) Koelcapaciteit (latent)</div><div>(E) Capacidad de refrigeración (latente)</div><div>(I) Capacità di raffreddamento (latente)</div><div>(GR) Ατρόδοση ψύξης (αυθέρνωση)</div><div>(P) Capacidade de arrefecimento (latente)</div><div>(TR) Soğutma kapasitesi (gizli)</div><div>(RU) Холодopроизводительность (скрытая)</div><div>(S) Kyliningskapacitet (latent)</div><div>(N) Avkjølingskapasitet (latent)</div><div>(CZ) Chladicí výkon (latentní)</div><div>(HR) Kapacitet hlađenja (latentno)</div><div>(H) Hűtési teljesítmény (látens)</div><div>(RO) Capacitate de răcire (cu dezumidificare)</div><div>(SL) Moč hlađenja (latentna)</div><div>(SK) Kapacita chladenia (latentná)</div><div>(ES) Capacidad de refrigeración (latente)</div><div>(PL) Wydajność chłodnicza (ujajona)</div><div>(DK) Kølekapacitet (skjult)</div><div>(FIN) Jäähdytyskapasiteetti (latentti)</div><div>(EST) Jahutusvõimsus (latentne)</div><div>(LV) Dzesēšanas kapacitāte (latentā)</div><div>(LT) Vėsinimo galia (latentinė)</div><div>(AL) Kapaciteti i ftohjes (në gjendje glumi)</div><div>(SRB) Kapacitet hlađenja (latentan)</div></div>	<div><div>(GB) Heating capacity</div><div>(D) Heizleistung</div><div>(F) Puissance de chauffage</div><div>(NL) Verwarmingscapaciteit</div><div>(E) Capacidad de calefacción</div><div>(I) Capacità di riscaldamento</div><div>(GR) Ατρόδοση θερμότητας</div><div>(P) Capacidade de aquecimento</div><div>(TR) Isıtma kapasitesi</div><div>(RU) Теплопроизводительность</div><div>(S) Värmekapacitet</div><div>(N) Oppvarmingskapasitet</div><div>(CZ) Topný výkon</div><div>(HR) Kapacitet grijanja</div><div>(H) Fűtési teljesítmény</div><div>(RO) Capacitate de încălzire</div><div>(SL) Moč ogrevanja</div><div>(SK) Výkon ohrevu</div><div>(ES) Total electric power input</div><div>(PL) Wydajność grzewcza</div><div>(DK) Varmekapacitet</div><div>(FIN) Lämmitysteho</div><div>(EST) Küttevõimsus</div><div>(LV) Apsildes kapacitāte</div><div>(LT) Šildymo galia</div><div>(AL) Kapaciteti i ngrohjes</div><div>(SRB) Kapacitet grijanja</div></div>	<div><div>(GB) Total electric power input</div><div>(D) Elektrische Gesamtleistungsaufnahme</div><div>(F) Entrée électrique totale</div><div>(NL) Totaal opgenomen vermogen</div><div>(E) Potencia eléctrica de entrada total</div><div>(I) Potenza elettrica totale assorbita</div><div>(GR) Συνολική ηλεκτρική ισχύς εισόδου</div><div>(P) Entrada de potência elétrica total</div><div>(TR) Cekilen toplam elektrik gücü</div><div>(RU) Общая потребляемая электрическая мощность</div><div>(S) Total effektingång</div><div>(N) Total elektrisk strameffekt</div><div>(CZ) Celkový elektrický příkon</div><div>(HR) Ukupna primljena snaga električne energije</div><div>(H) Teljes áramforrás-bemenet</div><div>(RO) Consum total de putere</div><div>(SL) Skupna vhodna električna moč</div><div>(SK) Celkový elektrický príkon</div><div>(ES) Obща входная электрическая мощность</div><div>(PL) Całkowita pobierana energia elektryczna</div><div>(DK) Total elektrisk strømforsyning</div><div>(FIN) Sähkötehon kokonaistulo</div><div>(EST) Kogu elektriline sisendvõimsus</div><div>(LV) Kopējā elektriskā ieejas jauda</div><div>(LT) Bendroji elektros vartojamoji galia</div><div>(AL) Konsumi total i energjisë elektrike</div><div>(SRB) Ukupna ulazna električna snaga</div></div>	<div><div>(GB) Sound power level (per speed setting, if applicable)</div><div>(D) Schalleistungspegel (je Geschwindigkeitseinstellung, falls zutreffend)</div><div>(F) Niveau de puissance sonore (par réglage de vitesse, le cas échéant)</div><div>(NL) Geluidsvormogenniveau (per snelheidsinstelling, indien van toepassing)</div><div>(E) Nivel de potencia acústica (según ajuste de velocidad, si corresponde)</div><div>(I) Livello di potenza sonora (per velocità impostata, se applicabile)</div><div>(GR) Στάθμη ηχητικής ισχύος (ανάρρησηση ταχύτητας, εφόσον δικαιότερα)</div><div>(P) Nivel de potência acústica (por regulação de velocidade, se aplicável)</div><div>(TR) Ses gücü seviyesi (mümkünse hız ayarı başına)</div><div>(RU) Уровень звукового давления (согласно настройке скорости, если применимо)</div><div>(S) Ljudeffektsnivå (per hastighetsinställning, om tillämpligt)</div><div>(N) Nivå på lydeffekt (per hastighetsinnstilling, hvis tilgjengelig)</div><div>(CZ) Hladina akustického výkonu (dle nastavení otáček pokud je to použitelné)</div><div>(HR) Razina jačine zvuka (postavka prema brzini, ako je primjenljivo)</div><div>(H) Hangerőszint (sebességszintenként, ha alkalmazható)</div><div>(RO) Nivel presiune sonoră (în funcție de turată, dacă este cazul)</div><div>(SL) Raven zvočne moči (glede na nastavitev hitrosti, če se uporablja)</div><div>(SK) Úroveň akustického tlaku (na príslušné nastavenie rýchlosti, ak sa používa)</div><div>(ES) Nivel na звукова мощность (за различные настройки на оборотите, ако е приложимо)</div><div>(PL) Poziom mocy dźwięku (dla ustawienia prędkości, jeśli dotyczy)</div><div>(DK) Støjniveau (efter hastighedsindstilling hvis relevant)</div><div>(FIN) Äänen tehokaso (nopeusasetuksen mukaan, jos sovellettavissa)</div><div>(EST) Helivõimsuse tase (võimalusel olenevalt määratud kiirusest)</div><div>(LV) Skanās intensitātes līmenis (attiecīgā gadījumā – katram ātruma iestatījumam)</div><div>(LT) Garso galios lygis (vienai greičio nuostatai, jei taikytina)</div><div>(AL) Niveli i fuqisë së tingullit (për cilësim shtepëjësie, nëse aplikohet)</div><div>(SRB) Nivo zvučne snage (po podešenoj brzini, ako je primenljivo)</div></div>

	Prated,c (sensible)	Prated,c (latent)	Prated,h	Pelec	Lwa	Prated,c (sensible)	Prated,c (latent)	Prated,h	Pelec	Lwa
FWE04FF	1.8				52					
FWE05FF	2.0	0.4	2.6	0.057	53	FWE04FT		1.8	0.058	52
FWE06FF	2.7	0.5	2.7	0.057	61	FWE05FT	2.1	0.6	0.058	52
FWE08FF	3.5	0.7	3.2	0.079	55	FWE06FT	2.7	0.8	0.082	61
FWE10FF	3.7	0.8	5.1	0.094	57	FWE08FT	3.6	0.9	0.096	54
FWE12FF	4.3	0.9	5.3	0.109	60	FWE10FT	3.8	1.0	0.103	57
FWE14FF	5.6	1.0	5.8	0.122	61	FWE12FT	4.3	1.1	0.115	61
FWE16FF	6.3	1.3	8.1	0.170	64	FWE14FT	5.6	1.4	0.175	60
FWE20FF	8.3	1.3	10.7	0.189	60	FWE16FT	6.4	1.4	0.190	64
FWE24FF	9.7	1.7	11.8	0.224	64	FWE20FT	8.6	1.9	0.191	59
		1.9				FWE24FT	9.9	2.1	0.230	64



**DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ SAN.TİC. A.Ş.**

Gülsuyu Mahallesi, Fevzi Çakmak Caddesi, Burçak Sokak, No:20, 34848 Maltepe

İSTANBUL / TÜRKİYE

Tel: 0216 453 27 00

Faks: 0216 671 06 00

Çağrı Merkezi: 444 999 0

Web: www.daikin.com.tr